
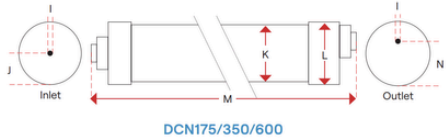



Defender Condensate Neutraliser

PRODUCT CODE: As below.

KEY FEATURES

- Condensate Neutralizers are ideal for neutralizing condensate from condensing boilers operating on natural gas or propane. Models up to 600KW come with 3/4" pressure PVC adaptor fittings and mounting clips. Please refer to the instruction manual for more details.
- The condensate is acidic and has the potential to harm the environment and the sewer system components. The Condensate Neutralizer will raise the pH of the condensate to a more neutral level before it is discharged to drain. If the drain is used, in some portion of its run, solely for the purpose of condensate removal and the drain material is subject to damage from acidic condensate then the use of the Condensate Neutralizer is advisable and if applied properly and regularly maintained can avoid damage associated with a leak in your drain piping. Models up to 600KW come with 3/4" pressure PVC adaptor fittings and mounting clips. Please refer to the instruction manual for more details.
- Ideal for neutralizing condensate from condensing boilers and furnaces operating on natural gas or propane. Compatible with all condensing Boiler installations brands including ACERO, Rendermax, Baxi, Vaillant, Fondital and other older Condensing Boiler models.

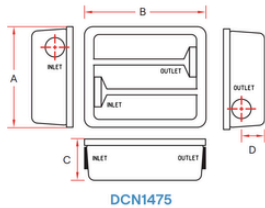

Model	A	B	C	D	E	F	G	H
DCN1475	356	433	150	85.5	-	-	-	-
DCN1750	203	168	305	95	381	146	67	304.8

Model	kW	I	J	K	L	M	N
DCN65V	65	15 BSPF	35	51	70	375	-
DCN175	176	15 BSPF	64	114	121	324	86
DCN350	352	15 BSPF	64	114	121	473	86
DCN600	586	15 BSPF	64	114	121	705	86

Capacity	Code
1475KW	DCN1475
1475KW - Recharge Kit	D1475RCK
600KW	DCN600
600KW - Recharge Kit	D600RCK
350KW	DCN350
350KW - Recharge Kit	D350RCK
175KW	DCN175
175KW - Recharge Kit	D175RCK



SCAN HERE TO FIND OUT MORE

Defender Condensate Neutraliser

INSTRUCTION SHEET

INSTRUCTIONS

Defender® condensate neutralisers should only be installed by a qualified professional. Read all instructions before installing. Perform steps in the order given. Failure to comply could result in a defective installation with the risk of property damage and personal injury. Do not allow flue gases to vent through condensate neutraliser. Vent in cap is designed to allow proper flow through neutraliser. All condensate drain lines must have a water trap before entering the neutraliser. Defender neutralisers should only be connected to a condensate outlet that is installed per the appliance manufacturer's instructions.

IMPORTANT

The Condensate Neutraliser should be installed below all traps and condensate outlets. It is recommended that the installer maintain a pitch of 15mm per metre between the condensate neutraliser outlet and the pump or drain. Do not use pipe dope on threaded fittings - use only Teflon tape. Defender condensate neutralisers must NOT be installed in the vertical position (except for the DCN-65V vertical model) It is recommended that the neutraliser be installed before a condensate pump where needed. All condensate traps should be primed before commencing operation of the appliance. Defender Condensate Neutraliser media should be replaced at least once a year or when pH falls below local regulations. Defender Condensate Neutralisers are suitable for outdoor installation, however must be protected from sunlight and UV rays.

MOUNTING OPTIONS


It is recommended that Defender condensate neutralisers be installed as close as possible to the outlet of the condensate trap. Condensate neutraliser may be installed on level ground or mounting brackets (not provided). Defender condensate neutralisers may be installed on or above the floor so long as a pitch of 15mm per metre is maintained between the neutraliser outlet and the drain or pump. It is recommended that unions be installed to facilitate maintenance of the condensate neutraliser.

INSTALLATION

1. If using PVC pipe, apply Teflon tape to the threads of PVC socket adaptors and attach to neutraliser. Do not over tighten.
2. Identify suitable location for assembled condensate neutraliser. Observe direction of flow as indicated on neutralizer.
3. PVC unions should be secured at either end of the neutralizer.
4. Prime and glue PVC pipe to fittings. Note: If using flexible tubing, be sure to use hose clamps at barb fittings. Note: PVC pipe is the preferred method for piping condensate drain lines.
5. Route PVC pipe or tubing to drain or pump, maintaining a pitch of 15mm per metre.
6. Fill condensate trap with water until flow is established through neutralizer.
7. Observe neutralizer during boiler operation to ensure unrestricted condensate flow.
8. Location of unit must allow service access.

MAINTENANCE

1. All service items should be undertaken by a qualified professional.
2. Visually inspect unit for signs of leaking or damage.
3. Neutraliser media should be replaced at least once a year or when pH falls below local regulations. Neutraliser efficiency can only be determined by measuring pH level of condensate outflow. Replacement media is available as a spare part.
4. Treated condensate should be as close to 7 (neutral) as possible with 5 being the minimum.
5. Disconnect condensate line from both the inlet and the outlet of the neutralizer.
6. Unscrew cap and remove spent neutralizer media. Rinse empty neutralizer with water.
7. Add replacement media and replace cap.
8. Reattach neutralizer to condensate line and prime flue gas trap with a minimum of 1 gallon of water. 9. Observe neutralizer during boiler operation to ensure unrestricted condensate flow.

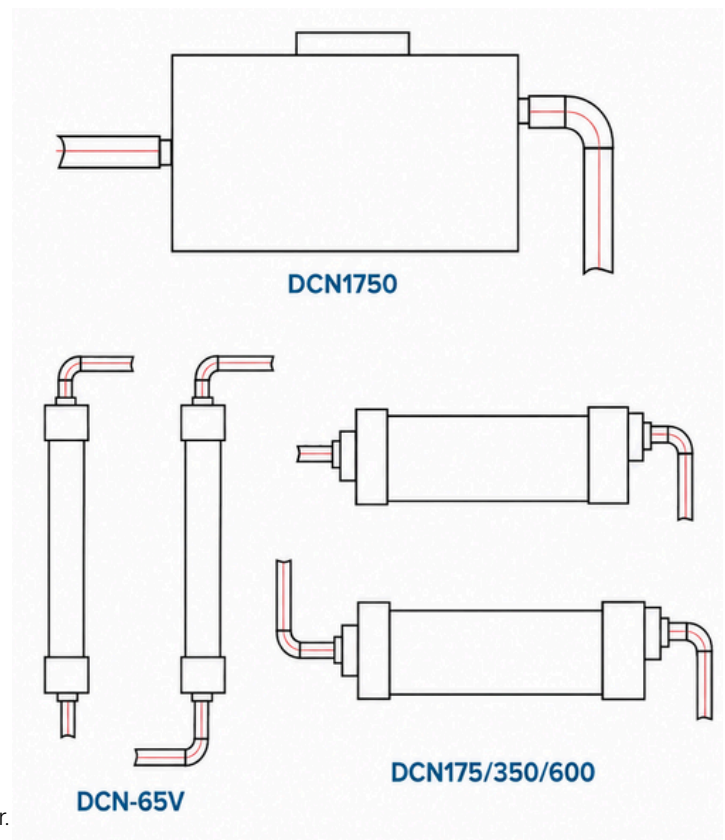

0800 77 78 79

flowquip.co.nz

FlowQuip
Piped Equipment Specialties